


Seats Adjustment, Front Only , (Q1A),(3L5)

From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



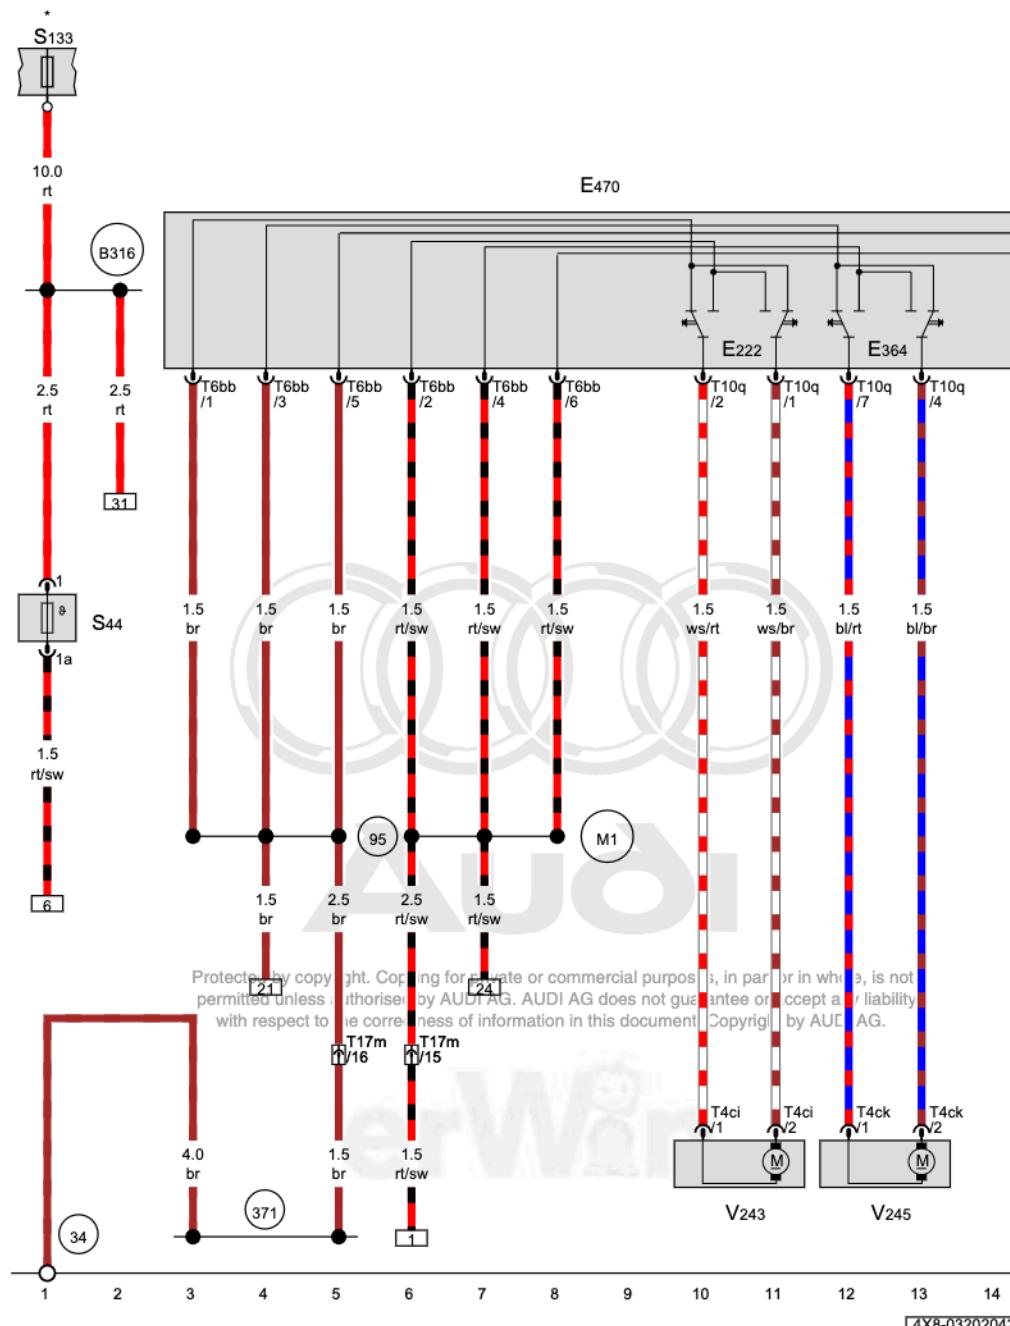

Driver Seat Adjustment Control Head, Driver Power Seat Adjustment Circuit Breaker 1

E222 Driver Seat Angle Adjustment Switch
E364 Driver Seat Height Adjustment Switch
E470 Driver Seat Adjustment Control Head
S44 Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station

S133 Safety Fuse 3

T4ci 4-Pin Connector

T4ck 4-Pin Connector

T6bb 6-Pin Connector

T10q 10-Pin Connector

T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat

V243 Driver Seat Angle Adjustment Motor

V245 Driver Seat Height Adjustment Motor

34 Ground Connection Under Driver Seat

95 Ground Connection 1 (in Seat Adjustment Wiring Harness)


371 Ground Connection 6 (in Main Wiring Harness)

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

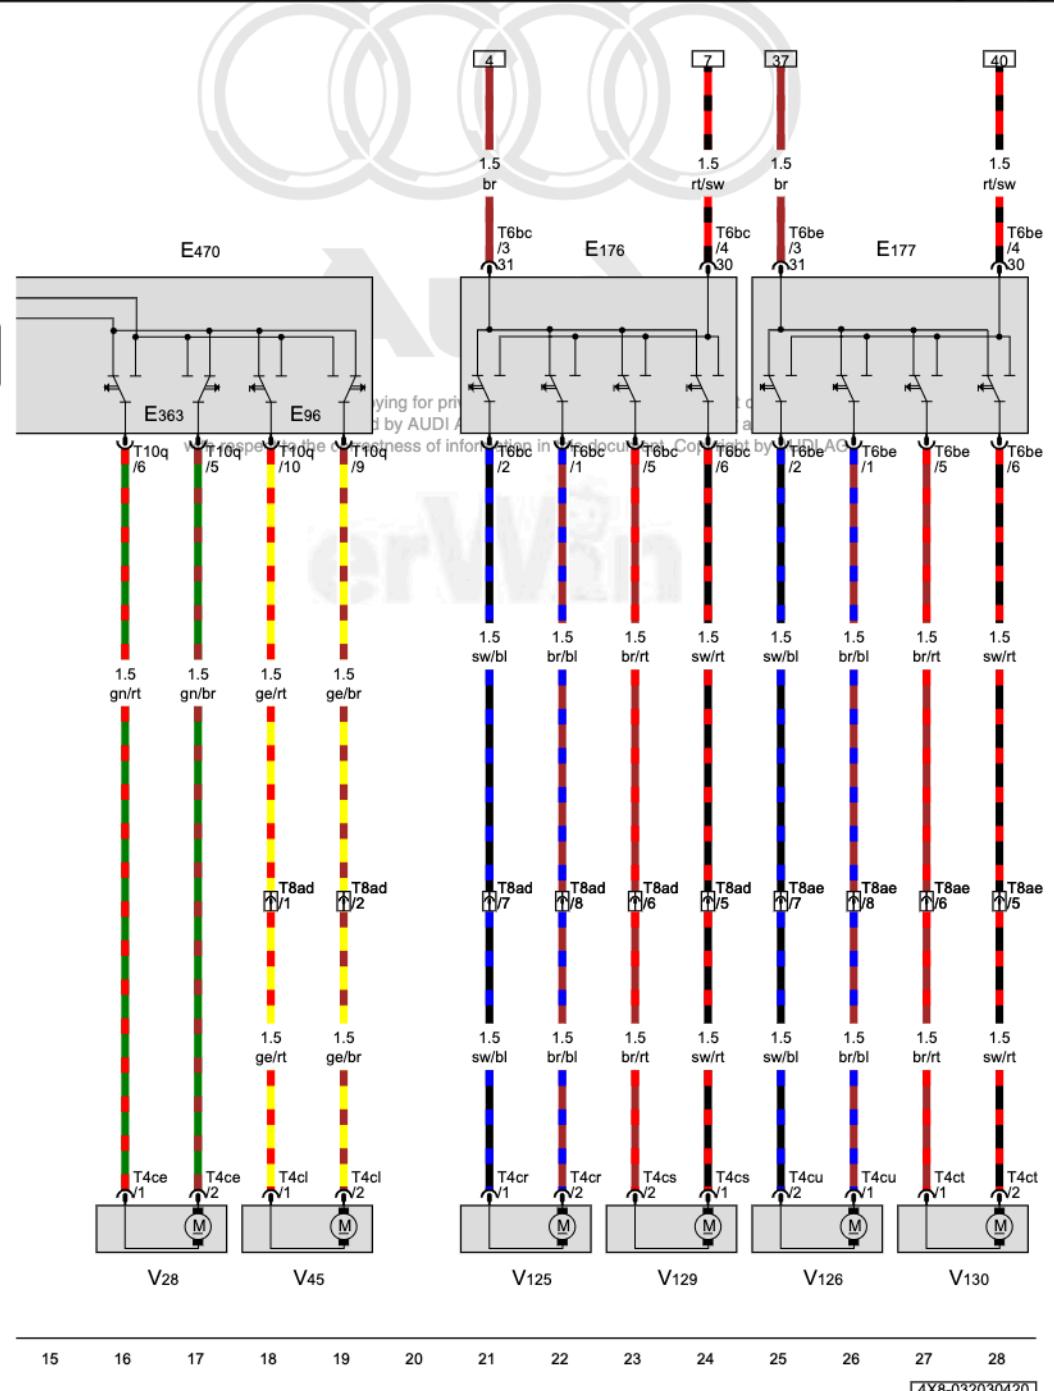

Driver Seat Lumbar Support Adjustment Switch, Front
Passenger Seat Lumbar Support Adjustment Switch, Driver
Seat Adjustment Control Head

- E96 Driver Backrest Adjustment Switch
- E176 Driver Seat Lumbar Support Adjustment Switch
- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- E363 Driver Seat Forward/Back Adjustment Switch
- E470 Driver Seat Adjustment Control Head
- T4ce 4-Pin Connector
- T4cl 4-Pin Connector
- T4cr 4-Pin Connector
- T4cs 4-Pin Connector
- T4ct 4-Pin Connector
- T4cu 4-Pin Connector
- T6bc 6-Pin Connector
- T6be 6-Pin Connector
- T8ad 8-Pin Connector, In the Driver Seat
- T8ae 8-Pin Connector, In the Front Passenger Seat
- T10q 10-Pin Connector
- V28 Driver Seat Forward/Back Adjustment Motor
- V45 Driver Backrest Adjustment Motor
- V125 Driver Seat Lumbar Support Curvature Adjustment Motor
- V126 Front Passenger Seat Lumbar Support Curvature Adjustment Motor
- V129 Driver Seat Lumbar Support Height Adjustment Motor
- V130 Front Passenger Seat Lumbar Support Height Adjustment Motor

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

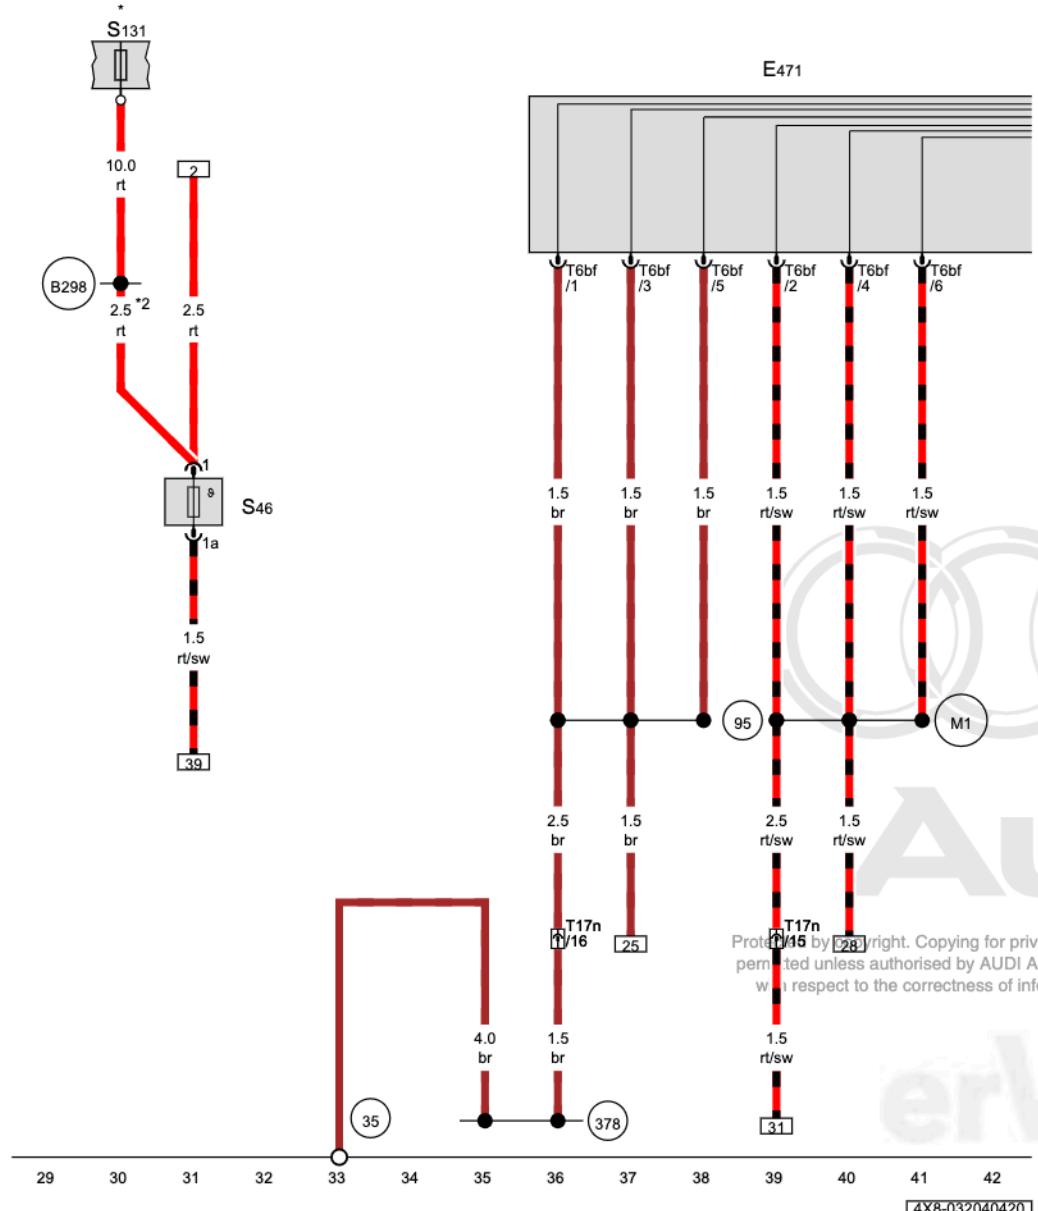

Front Passenger Seat Adjustment Control Head, Front Passenger Power Seat Adjustment Circuit Breaker 1


E471 Front Passenger Seat Adjustment Control Head
 S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
 S131 Safety Fuse 1
 T6bf 6-Pin Connector
 T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
 35 Ground Connection Under Front Passenger Seat
 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
 378 Ground Connection 13 (in Main Wiring Harness)
 B298 Positive Connection 2 (30) (in Main Wiring Harness)
 M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)
 * Refer to Applicable Wiring Diagram for Fuse Positions
 *2 Refer to Applicable Wiring Diagram for Fuse Positions From June 2014

ws = white
 sw = black
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protection by AUDI AG. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front Passenger Seat Adjustment Control Head

- E64 Front Passenger Seat Forward/Back Adjustment Switch
- E98 Front Passenger Backrest Adjustment Switch
- E334 Front Passenger Seat Angle Adjustment Button
- E365 Front Passenger Seat Height Adjustment Switch
- E471 Front Passenger Seat Adjustment Control Head
- T4cm 4-Pin Connector
- T4co 4-Pin Connector
- T4cp 4-Pin Connector
- T4cv 4-Pin Connector
- T8ae 8-Pin Connector, In the Front Passenger Seat
- T10s 10-Pin Connector
- V31 Front Passenger Seat Forward/Back Adjustment Motor
- V46 Front Passenger Backrest Adjustment Motor
- V244 Front Passenger Seat Angle Adjustment Motor
- V246 Front Passenger Seat Height Adjustment Motor

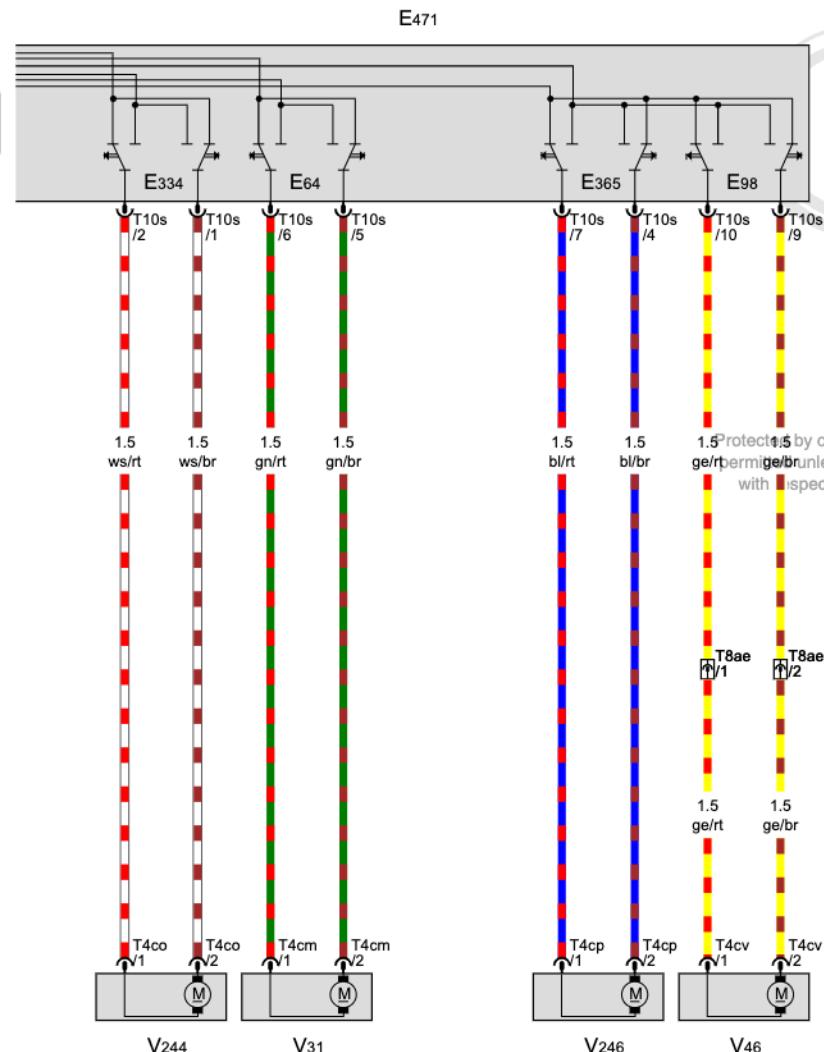

Audi

erWan

by copyright. Copying for private or commercial purposes, in part or in whole, is not
permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability
with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink